



## CATTLEGUARD INSTALLATION

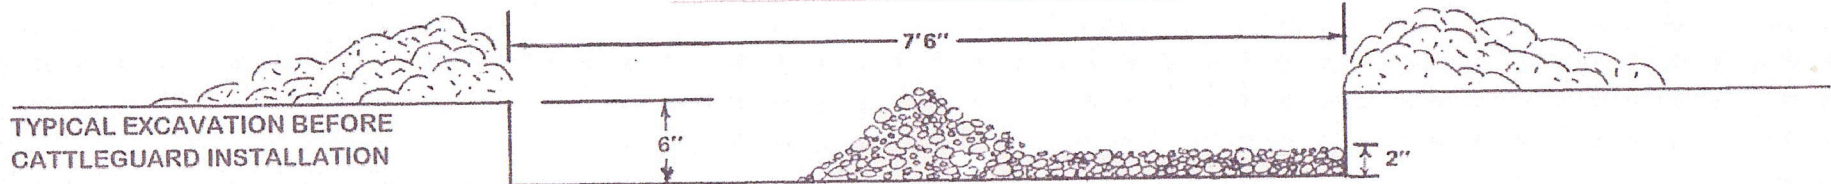

TYPICAL EXCAVATION BEFORE  
CATTLEGUARD INSTALLATION

Dig 7½ ft x 13 ft for a 12 ft guard. Depth may be varied according to conditions.

Example: A normal level farm lane would require 6 inch depth with 2 inch of crushed stone. In rough conditions, such as at the bottom of a hill or a muddy road, you may set the cattleguard on top of the road and build up to it. Generally, we say the higher the cattleguard the better. When digging, place half the dirt on each side of the excavation in the roadway.

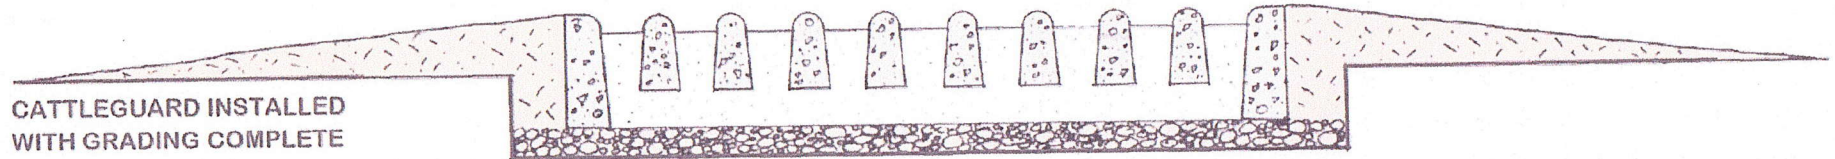

CATTLEGUARD INSTALLED  
WITH GRADING COMPLETE

AFTER GUARD IS SET, USE THIS DIRT TO BUILD UP ON EACH SIDE OF THE GUARD, THEN COVER THE DIRT WITH FRESH GRAVEL.